


Casegood Hardware Selections:



New London Collection is available in the following finishes:

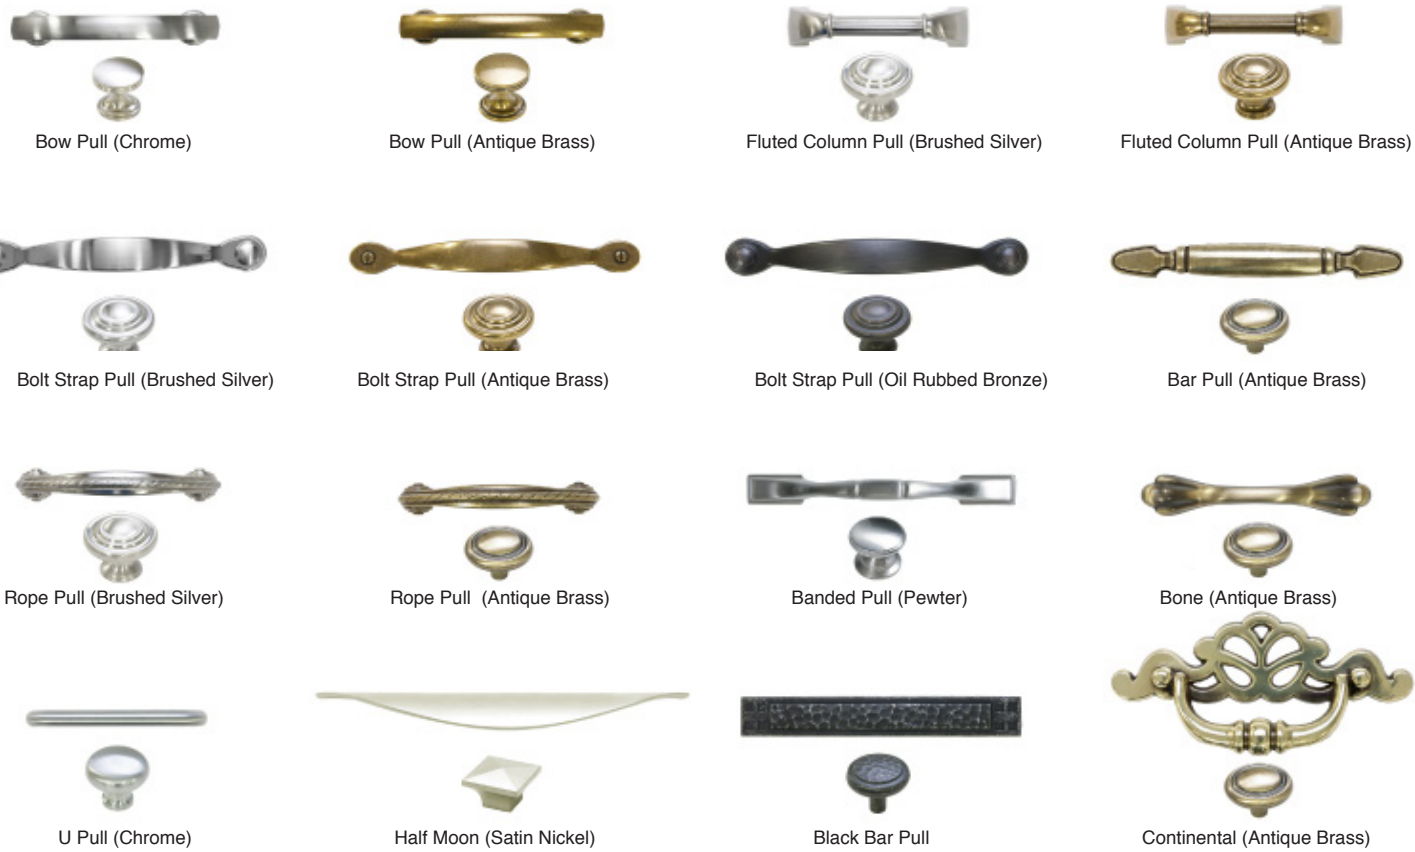

The New London Collection



1.678.201.3200 Fax 1.770.368.4954
Information contained herein is subject to change.
The most current and complete product information can be found on our website.
www.grahamfield.com




© 2016, GF Health Products, Inc. All Rights Reserved.
Basic American Medical Products is a trademark of GF Health Products, Inc.
GF Health Products, Inc. is an ISO 13485 Certified Company.

GF1000080RevE16



Casegood Construction

Drawer fronts are separate from the drawer box, simplifying replacement, if necessary.

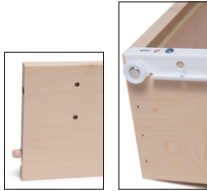

Drawer construction includes dowels and staples on sides with an additional bead of glue along perimeter of drawer bottom.

Self-closing drawers have metal drawer slides that are tested to 100 lb capacity per drawer and have drawer stops for safety. Drawers are easily removable by lifting up over the glides.

Ventilated backs of bedsides and dressers promote airflow.

All units have smooth floor glides for ease of movement.

All bedsides, dressers, and wardrobes have a full bottom board for structural support.

European-style hinges provide superior strength and adjustability. Doors can be removed without removing hinges from either the door or cabinet. Hidden hinges offer 110 degree swing and are self-closing.

Wardrobe clothes bar height is adjustable.

All bedsides, dressers, and wardrobes have a full bottom board for structural support.

All units have smooth floor glides for ease of movement. Wardrobes 36" and have internal access levelers.

Optional locks are available for all units. Locks are generally placed on the top bedside drawer or on wardrobe doors. Two keys are provided per lock. Master keys are available with initial order.



The New London Collection
Design Specifications



Three Drawer
Bedside Chest
A31L-68



Four Drawer
Dresser
A37L-68



Two Door, Two
Drawer Wardrobe
B02L-68



Features vertical corner cove moldings and hardwood crown moldings. Rounded corners.

Surface:	Laminate
Top Edge:	Wood, hardwood crown moldings
Door/Drawer Front Edges:	Self-edge
Drawer Style:	Inset
Kickplate:	Inset solid kickplate
Wardrobe:	Showtop with hardwood crown moldings

	Door/Drawer Bedside Cabinet A30-L68 W-23.75", D-18", H-30"
	Three Drawer Bedside Chest A31-L68 W-23.75", D-18", H-30"
	Three Drawer Dresser A36-L68 W-30", D-18", H-30"
	Four Drawer Dresser A37-L68 W-30", D-18", H-34"
	Side-by-Side Six Drawer Dresser A371-L68 W-43", D-18", H-30"
	Two Door Wardrobe B01-L68 W-24", D-22.25", H-76" B011-L68 W-30", D-22.25", H-76" B012-L68 W-36", D-22.25", H-76" B013-L68 W-42", D-22.25", H-76" B014-L68 W-48", D-22.25", H-76"
	Two Door, Two Drawer Wardrobe B02-L68 W-24", D-22.25", H-76" B021-L68 W-30", D-22.25", H-76" B022-L68 W-36", D-22.25", H-76"
	Two Door, Side-by-Side Four Drawer Wardrobe B023-L68 W-42", D-22.25", H-76" B024-L68 W-48", D-22.25", H-76"
	Armoire, 4 Drawer B021TV-L68 W-30", D-23", H-66"

Special Order custom sizes of casegoods are available.