ecolense GREEN COLLECTION

PREMIERE COLLECTION

GUARDIAN eco









GUA-1319 SIREN

GUA-1304 **LATCH**

NEO



RENAISSANCE NEO

PATRIOT PLUS NEO

PAT-8602 OATMEAL PAT-8604 Concrete



Pat-8584 **Taupe**

SAVOY eco







SAV-401 VINTAGE GOLD



SAV-9516 INDIGO

CAS-9604 INDIGO





COBBLESTONE



PERFORMANCE COLLECTION DOLCE




DOL-6705 SAND

DOL-6714 BURGUNDY



DOL-6710 **LION**

CASSARA eco

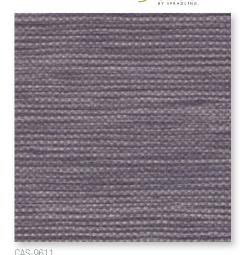

AMETHYST



SAV-409 WARM TAUPE

CAS-9607 PATINA






CAS-9606 SUCCULENTS

DOL-6724 **JET**



DOL-6727 METEOR



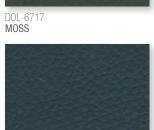









REN-9205 GYPSUM







REN-9212 BLUEJADE

DOL-6725 INDIGO









PAT-8567 **DOVE**





Pat-545 Royal Blue

PAT-8615 BERRY

on	Dolce	Patriot Plus	Renaissance	Guardian	Savoy
PVC					
PU					
ΓPE					
king					
ing					
ang					
yon					
ster					
(oz)	15	34	32	30	30

eco

Cassara

DOL	PAT	REN	GUA	SAV	CAS

DOL	PAT	REN	GUA	SAV	CAS
			-		
100k	100k		100k		100k

5	DOL	PAT	REN	GUA	SAV	CAS	
l							
l							
ò							
-							
ł							

-10°F -20°F -20°F -10°F -10°F -10°F



* This term and any corresponding data refer to the typical performance in the specific tests indicated and should not be construed to imply the behavior of this or any other material under actual SPRADLING[®] fire conditions.



Compositio

100% Polyester Hi-Loft^{2™} Back Polyester / Cotton Back Ultra Hi-Loft(2™) Polyester Back 100% Ray 100% Polyes Weight (Roll Size (yd) Roll Width (inch)

NFPA 260- Cover Fabric - Class I UFAC Fabric - Class 1 CAL TB 117-2013 FMVSS 302

Finishes and Treatment

PERMA**BLOK** SURE**GUARD**^T

PBG+PERMABLO

Codes*

Antibacterial Protection (1,000 hrs AATCC TM 16-3 / NTC 1479 CFFA-2a - Blue Wool (1,000 hrs

QUV Stabilzed Pigments (650 hr

Abrasion - CFFA-1 ASTM D-4157-0 Wyzenbeek Cotton Duc Cold Crack

Applications

Corporate Interiors | Restaurant | Hotel Casino | Sunroom | Residential Healthcare Marine Interior Exterior Approved



 (\oplus)

MDSAP



One Graham-Field Way | Atlanta, GA 30340 www.grahamfield.com | 770.368.4700

grahamfield...

Lumex Health Care Seating High Performance Fabric Collection

published August 2021

Care and Cleaning Guide**



We recommend cleaning at least once a week to extend the lifespan of the upholstery, which will prevent dirt and contamination buildup and permanent staining. In the event of a spill, wipe off any excess right away with a dry white cloth or fabric, but careful not to spread to remaining surface.



Clean the whole surface in a circular motion using liquid hand soap (pH neutral) and water (1 part soap to 9 parts water). Check the Approved Cleaners guide for recommended cleaning products. Wipe with a clean damp cloth to get rid of any excess soap. Repeat as needed and then let dry.



If there is any buildup that cannot be removed with soapy water, a mixture of 1 part isopropyl alcohol to 9 parts water can be used as a last resort. (Remember, using alcohol on a regular basis can affect the properties of the product).



Once a month, you can use a soft-bristle brush for a deeper cleaning. Remember, light colors need more care, more often.

Note: The cleaning products recommended were used in a laboratory setting. Spradling Group® has no relationship with the manufacturers of those cleaning products.

For Color Transfer

Certain clothing and accessory dyes (such as those used on denim jeans) may migrate to lighter colors. This phenomenon is increased by humidity and temperature and is irreversible. Please check compatibility when using this product in combination with painted or varnished surfaces.

Disinfectants

In addition to cleaning, healthcare facilities maintain disinfecting regimens to reduce the spread of infections. There is a wide variety of available biocides that include bleaches, peroxides and quaternary ammonium products, among others. They should always be used at the recommended dilution, never in concentrated form. To prolong the life of coated fabrics, the disinfectants should be rinsed off after each use. It should be noted that misuse of disinfectants is the major source of surface deterioration. Spradling International, Inc.® continually evaluates cleaners/disinfectants, and a list of those tested can be found on our website.

Abrasion test results exceeding ACT Performance Guidelines are not an indicator of product lifespan. Multiple factors affect fabric durability and appearance retention.

PBG+®, PERMAGUARD® and PERMABLOK® are registered trademark of Spradling Holdings, Inc. Lumex® is a trademark of GF Health Products, Inc.

©2021 Spradling International, Inc.®

*This term and any corresponding data refer to the typical performance in the specific tests indicated and should not be construed to imply the behavior of this or any other material under actual fire conditions

** Care and Cleaning Guide excludes Dolce.

Please visit www.spradling.group for the Polyurethane Fabric Cleaning Guide.



e



Information contained herein is subject to change without notice, the most content and complete prediction and certain exposure levels. Under the California (als, identified by the State of California as a cause of cancer, birth defects or other reproductive harm at certain exposure levels. Under the California (renuired where such products are sold. The presence of such chemicals in coated fabric products, even at extremely low concentrations, can lead to contract the California California (California) (California)